




Congratulations on selecting your new MonoZoom™ monocular! In order to achieve optimum performance, please follow instructions for proper use and care.


#### ASSEMBLING NECK STRAP:




1. Turn adapter counterclockwise and remove.

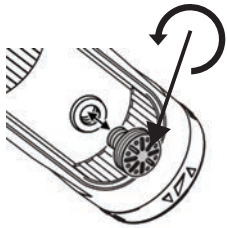


2. Insert loop through slot in adapter.

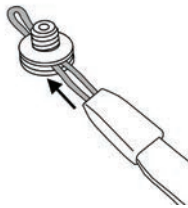


3. Pull loop back around adapter.

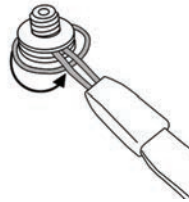

4. Pull back on loop to tighten into adapter as shown

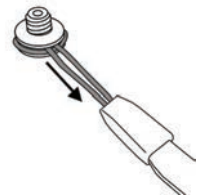


5. Attach adapter with strap to monocular.

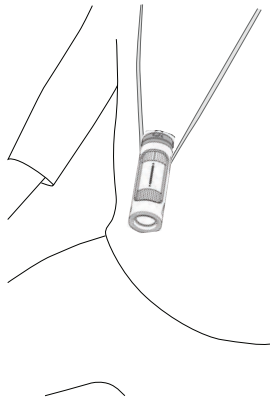


#### USING YOUR MONOCULAR:


1. To reduce glare, twist eyecup into outermost position. If you wear eyeglasses, you can twist eyecup down to improve field of view.

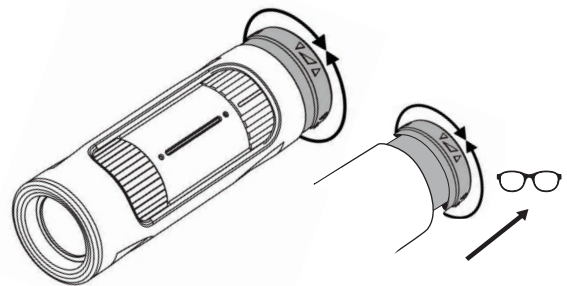

2. To focus, turn focus knob until image is clear.

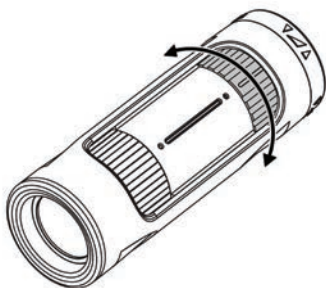

3. To zoom in or out, turn zoom knob to desired magnification.

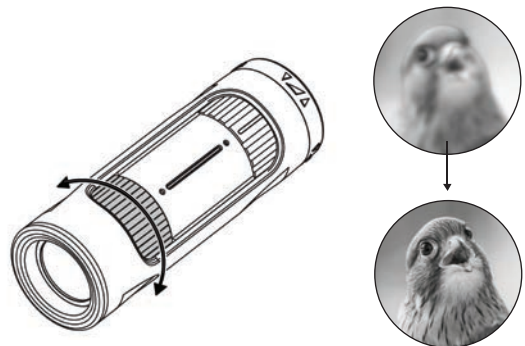

## **CLEANING MONOCULAR:**

Blow away any dust or debris on the lens (or use a soft lens brush). To remove dirt, grease or fingerprints, clean with a soft microfiber cloth, rubbing in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and cause permanent damage. For a more thorough cleaning, photographic type lens cleaning fluid may be used. Always apply the fluid to the cleaning cloth, never directly on the lens.

## **WARNING:**

- Do not expose the monocular to excessive moisture.
- Do not view the sun with this monocular. Viewing the sun can cause permanent eye damage.

### **Customer Service:**

If you experience any difficulties, please contact us and we will be happy to help you.

#### **In the U.S.A.**

Email: [info@carson.com](mailto:info@carson.com)

#### **In the U.K.**

Email: [uksupport@carson.com](mailto:uksupport@carson.com)

#### **In the E.U.**

Email: [eusupport@carson.com](mailto:eusupport@carson.com)

**For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)**